

Technical Information

Micropilot S FMR533

Level-Radar

Level transmitter for continuous and non-contact precision level measurement



For custody transfer and inventory control applications with NMI- and PTB-approvals.

Application

The Micropilot S is used for highly accurate level measurement in storage tanks and can be applied in custody transfer applications. It meets the relevant requirements according to OIML R85 and API 3.1B.

The FMR533 with parabolic antenna is excellently suited for free space applications up to 40 m (131 ft).

Your benefits

- 0.5 mm (0.02 in) accuracy (2σ value)
- National approvals (NMI, PTB) for custody transfer.
- Easy integration into tank gauging systems via the Tank Side Monitor NRF590.
- Easy and safe local operation via menu-guided alphanumeric display.
- Easy commissioning, documentation and maintenance via FDT/DTM technology (FieldCare).
- Low-cost, easy installation via 4-wire cable with HART and 24 V DC (intrinsically safe).
- Gas-tight process connection (second line of defense) standard for any antenna version.
- Inventory Control version with reduced accuracy (3 mm [0.12 in]) available for all device versions.

Table of contents

Document information	3	Environment	20
Document conventions	3	Ambient temperature range	20
Function and system design	5	Storage temperature	20
Measuring principle	5	Climate class	20
Equipment architecture	6	Degree of protection	20
Custody transfer applications	7	Vibration resistance	20
Integrated in tank gauging system	7	Cleaning of the antenna	20
Input	8	Electromagnetic compatibility (EMC)	20
Measured variable	8	Approvals for custody transfer	20
Measuring range	8	Process	20
Blocking distance	9	Process temperature range	20
Output	10	Process pressure limits	20
Output signal	10	Dielectric constant	20
Signal on alarm	10	Mechanical construction	21
Load	10	Design, dimensions	21
Linearization	10	Weight	22
Galvanic isolation	10	Materials	22
Power supply	11	Type plate for custody transfer applications	24
Terminal assignment	11	Endress+Hauser UNI flange	25
Supply voltage	12	Operability	26
Power consumption	12	Operation concept	26
Current consumption	12	Local operation	26
Electrical connection	13	Remote operation	26
Cable entry	13	Display elements	29
Ripple HART	13	Operating elements	30
Max. noise HART	13	Certificates and approvals	31
Oversvoltage protector	13	CE approval	31
Power supply	13	C-Tick symbol	31
Highly accurate measurement	13	Ex approval	31
Performance characteristics	14	Overfill prevention	31
Reference operating conditions	14	RF approvals	31
Maximum measured error	14	Custody type approval	31
Resolution	14	External standards and guidelines	31
Settling time	14	Ordering information	32
Hysteresis	14	Ordering information	32
Non-repeatability	14	Scope of delivery	32
Reaction time	14	Accessories	33
Long-term drift	14	Device-specific accessories	33
Influence of ambiente temperature	14	Communication-specific accessories	33
Proof of accuracy of custody transfer versions	14	Service-specific accessories	33
Maximum fill speed	14	Supplementary Documentation	34
Software reliability	14	Standard documentation	34
Inventory control versions	14	Supplementary device-dependent documentation	34
Installation	15	Safety Instructions	34
Installation conditions	15		
Installation instructions	16		
Measuring conditions	16		
Behavior if			
measuring range is exceeded	17		
Installation in tank (free space)	17		
Beam angle	19		

Document information

Document conventions

Safety symbols

Symbols	Meaning
 A0011189-EN	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
 A0011190-EN	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
 A0011191-EN	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
 A0011192-EN	NOTICE! This symbol contains information on procedures and other facts which do not result in personal injury.

Electrical symbols

Symbols	Meaning
 A0018335	Direct current A terminal at which DC voltage is present or through which direct current flows.
 A0018336	Alternating current A terminal at which AC voltage is present or through which alternating current flows.
 A0018337	Direct current and alternating current <ul style="list-style-type: none"> ▪ A terminal at which AC voltage or DC voltage is present. ▪ A terminal through which alternating current or direct current flows.
 A0018338	Ground connection A grounded terminal which, from the operator's point of view, is grounded via a grounding system.
 A0018339	Protective ground connection A terminal that must be connected to ground before establishing other connections.
 A0011201	Equipotential connection A connection that must be made with the plant grounding system. This could be, for example, a potential matching line or a star-shaped grounding system, depending on national or company codes of practice.

Symbols for certain types of information

Symbols	Meaning
 A0011182	Allowed Indicates procedures, processes or actions that are allowed.
 A0011183	Preferred Indicates procedures, processes or actions that are preferred.
 A0011184	Forbidden Indicates procedures, processes or actions that are forbidden.
 A0011193	Tip Indicates additional information.
 A0015483	Reference to documentation Refers to the relevant device documentation.

 <small>A0015484</small>	Reference to page Refers to the relevant page number.
 <small>A0015486</small>	Reference to graphics Refers to the relevant graphic number and page number.
1. , 2. , ...	Series of steps
 <small>A0015488</small>	Help in the event of a problem


Symbols in graphics

Symbols	Meaning
1, 2, 3, 4, ...	Numbering for main positions
1. , 2. , ...	Series of steps
A, B, C, D, ...	Views
A-A, B-B, ...	Sections
 <small>A0011187</small>	Hazardous area Indicates a hazardous area.
 <small>A0011188</small>	Safe area (non-hazardous area) Indicates a non-hazardous area.

Function and system design

Measuring principle

The Micropilot is a "downward-looking" measuring system, operating based on the time-of-flight method. It measures the distance from the reference point (process connection) to the product surface. Radar impulses are emitted by an antenna, reflected off the product surface and received again by the radar system.

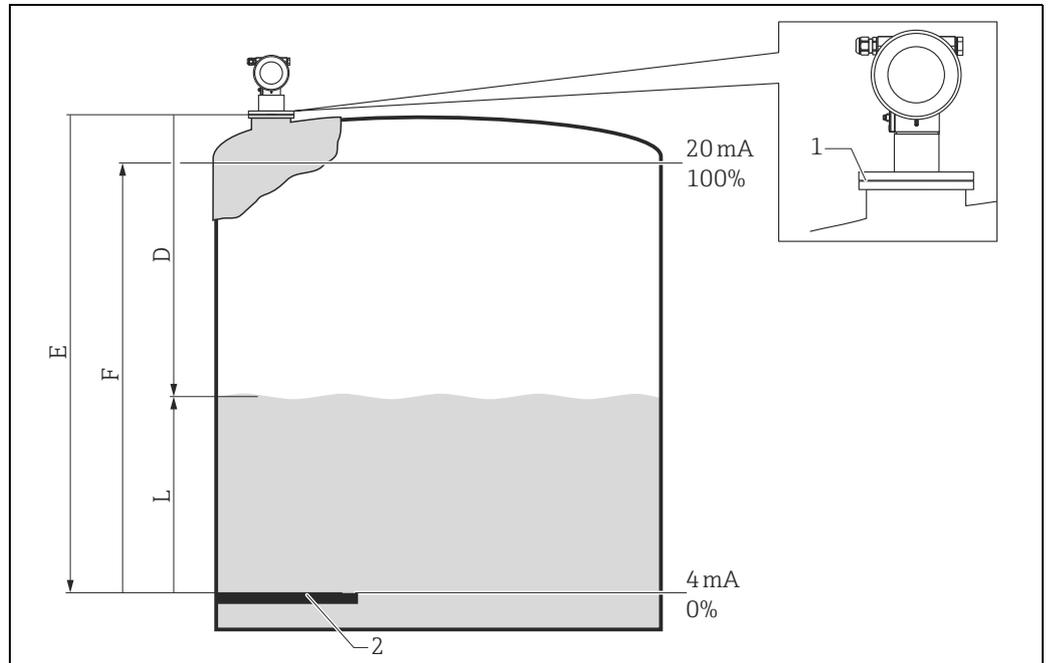

- 1 GRH reference point of measurement (bottom edge of flange or threaded connection)
2 Level zero point (gauge reference plate)

- E Empty calibration (= zero point)
F Full calibration (= span)
D Distance measured
L Level ($L = E - D$)

Input

The reflected radar impulses are received by the antenna and transmitted into the electronics. A microprocessor evaluates the signal and identifies the level echo caused by the reflection of the radar impulse at the product surface. The unambiguous signal identification is accomplished by the PulseMaster® software, based on many years of experience with time-of-flight technology. The mm-accuracy of the Micropilot S could be achieved with the patented algorithms of the PulseMaster® software.

The distance "D" to the product surface is proportional to the time of flight "t" of the impulse:

$$D = c \cdot t / 2,$$

with "c" being the speed of light.

Based on the known empty distance "E", the level "L" is calculated:

$$L = E - D$$

Refer to the above figure for the reference point for "E". The stability of the reference point for the measurement (GRH) has a decisive influence on the accuracy of the measurement! The Micropilot is equipped with functions to suppress interference echoes. The user can activate these functions. They ensure that interference echoes (i.e. from edges and weld seams) are not interpreted as level echo.

Output

The Micropilot is commissioned by entering an empty distance "E" (= zero), a full distance "F" (= span) and an application parameter. The application parameter automatically adapts the device to the process conditions. The data points "E" and "F" correspond with 4 mA and 20 mA for devices with current output. They correspond with 0 % and 100 % for digital outputs and the display module. For inventory control or custody transfer applications, the measurement should always be transferred via digital communication (HART).

A linearization with max. 32 points, based on a table entered either manually or semi-automatically, can be activated locally or remotely. This function allows, for example, measurement in engineering units and provides a linear output signal for spherical and horizontal cylindrical tanks, or tanks with a conical outlet.


Equipment architecture

Stand-alone

- The device has a passive 4-20 mA output with HART protocol.
- Reliable transmission of measurements with mm precision is guaranteed only by the HART protocol.

4-20 mA output with HART protocol

The complete measuring system consists of:

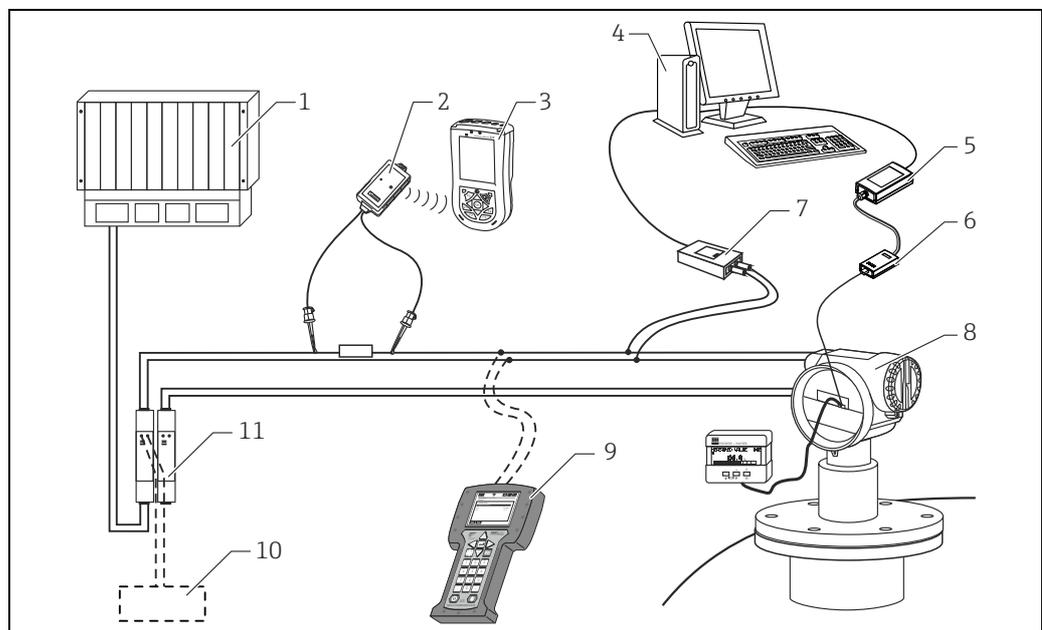

- 1 PLC (programmable logic controller)
- 2 VIATOR Bluetooth modem with connecting cable
- 3 Field Xpert
- 4 Computer with operating tool (e.g. FieldCare)
- 5 Commubox FXA291
- 6 ToF adapter FXA291
- 7 Commubox FXA195 (USB)
- 8 Micropilot with display module
- 9 Field Communicator 475
- 10 FXA195 or Field Communicator 475
- 11 Transmitter power supply unit RN221N (with communication resistor)

Local operation

- with display and operating module VU331,
- with a Personal Computer, Commubox FXA291 with ToF Adapter FXA291 (USB) and the operating software "FieldCare". FieldCare is a graphical operating software for devices from Endress+Hauser (radar, ultrasonic, guided micro-impulse). It assists with commissioning, securing data, signal analysis and documentation of the measuring point.

Remote operation

- with Field Communicator 475
- with Field Xpert
- with a personal computer, Commubox FXA195 and "FieldCare" operating software

Integration into the Asset Management System


The HART interface allows the integration into the AMS® (Asset Management System) from Fisher-Rosemount.

Custody transfer applications

The Micropilot S is suitable for custody transfer and inventory control applications. The on-site testing has to be done in compliance with the applicable regulatory standards. The Micropilot S can be sealed after successful on-site calibration to be protected against any access to the electronics compartment and any changes of software settings. If the Micropilot S is used for custody transfer or inventory control, any temperature influence on the tank shell height can be compensated for using the Tank Side Monitor (TSM). In addition, the vertical movement of the gauge reference point due to the hydrostatic tank deformation can be compensated in the Tank Side Monitor. A Tank Side Monitor can provide 24 V DC for a Micropilot S. The Tank Side Monitor can communicate with up to 6 devices via HART Multidrop.

Integrated in tank gauging system

The Endress+Hauser Tank Side Monitor NRF590 provides integrated communications for sites with multiple tanks, each with one or more sensors on the tank, such as radar, spot or average temperature, capacitive probe for water detection and/or pressure sensors. Multiple protocols out of the Tank Side Monitor guarantee connectivity to nearly any of the existing industry standard tank gauging protocols. Optional connectivity for 4-20 mA sensors, digital I/O and analog outputs facilitate full integration of all sensors at the tank. Use of the proven concept of the intrinsically safe HART bus (HART multidrop) for all on-tank sensors yields extremely low wiring costs, while at the same time providing maximum safety, reliability and data availability.

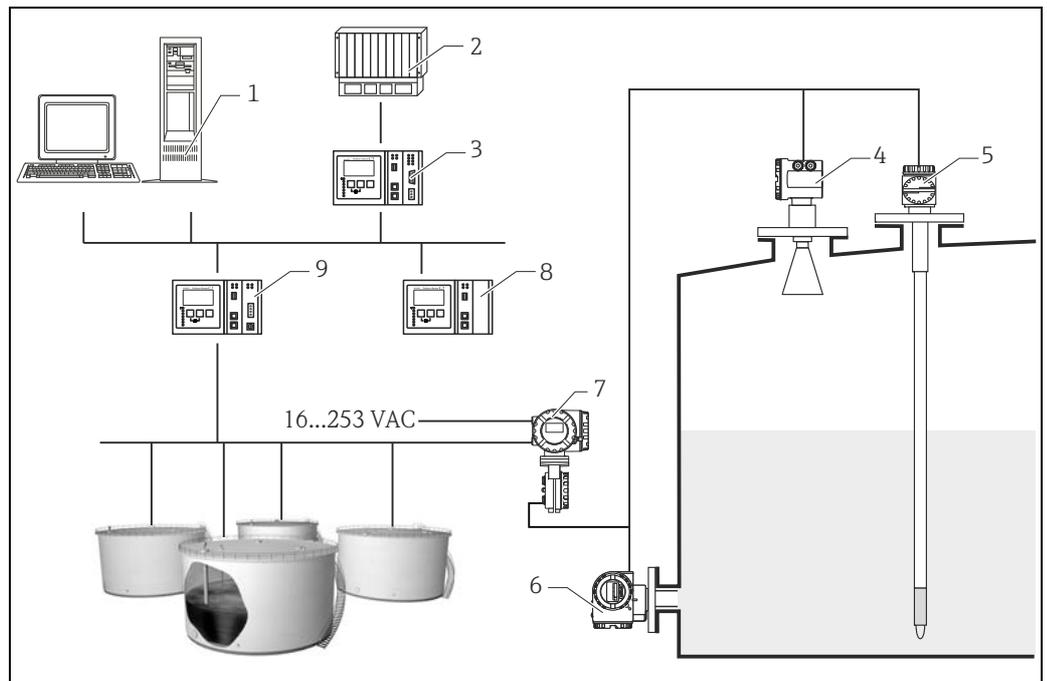

A0020697

- 1 Tankvision workstation
- 2 Process control system
- 3 Host Link
- 4 Micropilot S
- 5 Prothermo
- 6 Pressure transmitter
- 7 Tank Side Monitor
- 8 Data Concentrator
- 9 Tankvision Tank Scanner NXA820

Input

Measured variable

The measured variable is the distance between a reference point GRH (mounting flange) and a reflective surface (e.g. product surface). The measured value and all parameters are displayed using either metrical SI-units or US/UK-units (inch, ft, ...).

The level is calculated based on the tank height entered.


To compensate for non-linear effects such as movement of the tank roof, a correction table (dip chart) can also be entered.

Measuring range

The usable measuring range depends on the size of the antenna, the reflectivity of the medium, the mounting location, and eventual interference reflections.


The following tables describe the groups of media as well as the achievable measuring range as a function of application and media group. If the dielectric constant of the medium is unknown, we recommend that you assume media group **B**, in order to ensure a reliable measurement.

Media group	DC (ϵ_r)	Examples
A	1.4 to 1.9	Non-conducting liquids, e.g. liquefied gas (LPG). For more information, please contact your Endress+Hauser sales center.
B	1.9 to 4	Non-conducting liquids, e.g. gasoline, oil, toluene, white products, crude oil, bitumen, asphalt, ...
C	4...10	e.g. concentrated acids, organic solvents, esters, aniline, alcohol, acetone, ...
D	> 10	Conducting liquids, e.g. aqueous solutions, diluted acids and alkalies

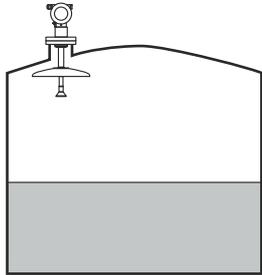Media group		Free space (Storage tank)
		
		<small>A0020762</small>
		Measuring range
A	DC (ϵ_r) = 1.4 to 1.9	—
B	DC (ϵ_r) = 1.9 to 4	40 m (131 ft)
C	DC (ϵ_r) = 4 to 10	
D	DC (ϵ_r) > 10	
Max. measuring range with custody transfer approval		NMI: 25 m (82 ft) PTB: 30 m (98 ft)

Blocking distance

The blocking distance (= BD) is the minimum distance from the reference point of the measurement (mounting flange) to the medium surface at maximum level.

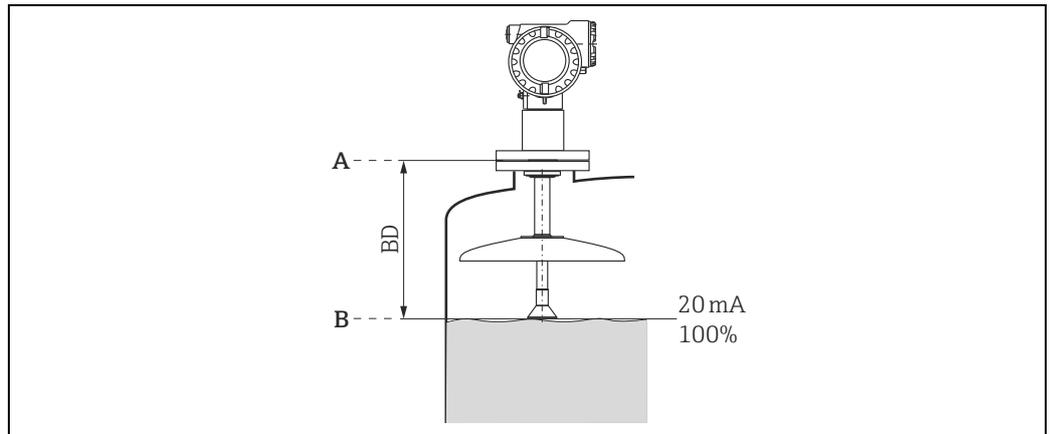

A Reference point of measurement
 B Maximum level

Blocking distance (BD) ¹⁾	Free space (Storage tank)
from flange	Horn length (→ 21)

1) 1 mm (0.04 in) accuracy under reference conditions

 Inside the blocking distance, a reliable measurement can not be guaranteed.

Output

Output signal	<p>4-20 mA (invertible) with HART protocol (e.g. for multi drop connection to Tank Side Monitor NRF590): This version can be operated using the PC operating software FieldCare. The device supports both point-to-point and multidrop operation. For measurements with mm precision, the measured value must be transmitted using the HART protocol to ensure the necessary resolution.</p> <p>Order code in Product Configurator under "Output; Operation": Version A (4-line display VU331, envelope curve display on site)</p>
Signal on alarm	<p>Error information can be accessed via the following interfaces:</p> <ul style="list-style-type: none">■ Local display:<ul style="list-style-type: none">- Error symbol- Plain text display- LED's: red LED continuously on = alarm, red LED flashes = warning■ Current output■ Digital interface
Load	<p>Min. load for HART communication: 250 Ω</p>
Linearization	<p>The linearization function of the Micropilot S allows the conversion of the measured value into any unit of length or volume. Linearization tables for calculating the volume in cylindrical tanks are pre-programmed. Other tables of up to 32 value pairs can be entered manually or semi-automatically.</p>
Galvanic isolation	<p>500 V towards:</p> <ul style="list-style-type: none">■ power supply and ground■ power supply and signal

Power supply

Terminal assignment


4-20 mA with HART

The 4-wire cable is connected to the screw terminals (wire diameters 0.5 to 2.5 mm² [20 to 14 AWG]) in the terminal compartment. Use 4-wire twisted pair cable with screen for the connection. Protective circuitry against reverse polarity, RFI, and over-voltage peaks is built into the device (TI00241F/00/EN, "basics for EMC-tests").

Connection to Tank Side Monitor NRF590

The Micropilot S may be connected, together with other devices in a hazardous area, to a Tank Side Monitor. In this case, it is recommended that the shielding on the cables be grounded centrally at the Tank Side Monitor and that all devices be connected to the same potential matching line (PML). If, for functional reasons, a capacitive coupling is required between the local ground and the shield (multiple grounding), ceramic capacitors with a minimum dielectric strength of 1500 Veff must be used. The overall capacity of 10 nF must not be exceeded in this case. The FISCO model provides information on grounding intrinsically safe, interconnected devices.

If it is not possible to lay a grounding cable between the NRF590 and the Micropilot S, it is possible to ground on one side at the NRF590. In this case, it is essential that the cable shield on the Micropilot S be grounded using a ceramic capacitor with a maximum capacitance of 10 nF and a minimum isolation voltage of 1500 V.

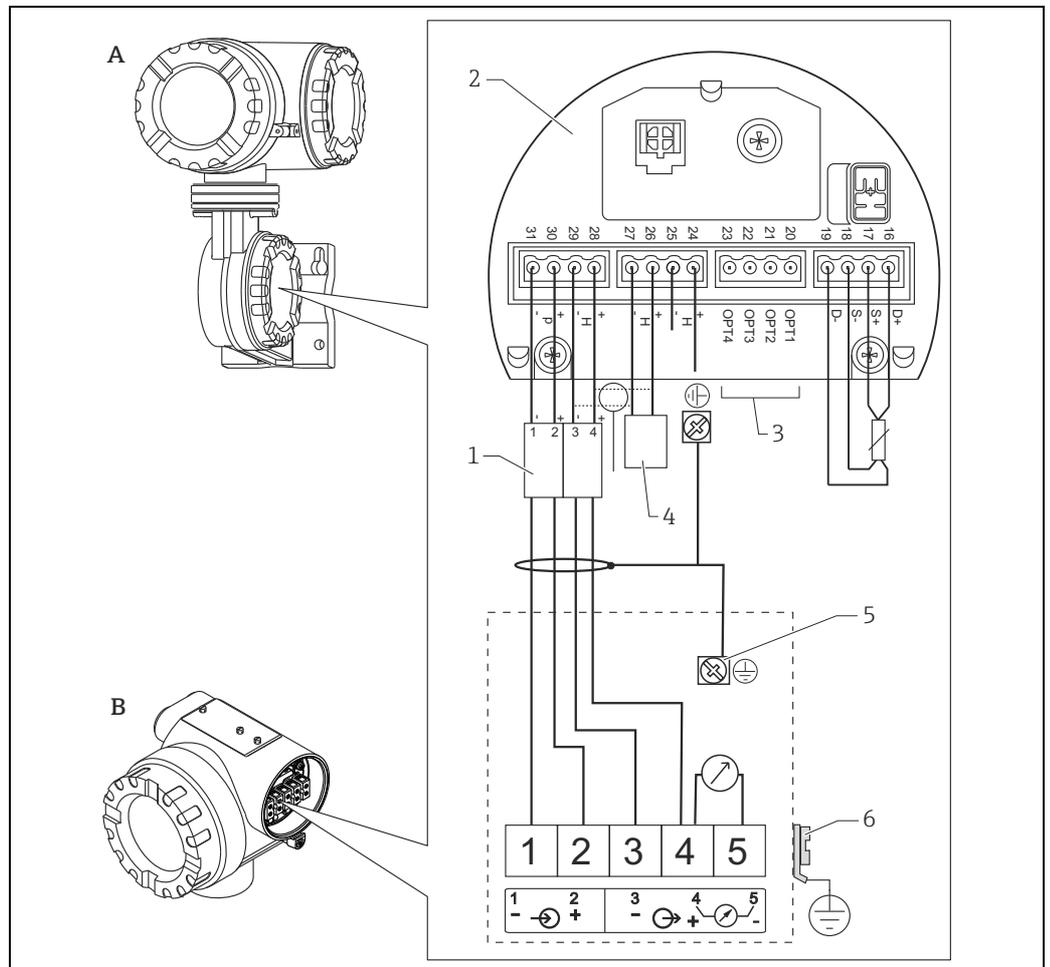


- A Tank Side Monitor NRF590
- B Micropilot S
- 1 For Micropilot S only
- 2 Intrinsically safe terminal strip
- 3 Shield, grounded on one side at Tank Side Monitor NRF590
- 4 HART sensor
- 5 Shielding cable
- 6 PML (potential matching line)

A0020823

Connection as a stand-alone device

The Micropilot S located in a hazardous area is connected as a stand-alone device to a power supply unit and transmitter located outside the hazardous area. In this case, it is recommended that the shielding directly on the Micropilot be connected to the housing ground; the Micropilot S and the supply unit are connected to the same potential matching line (PML).

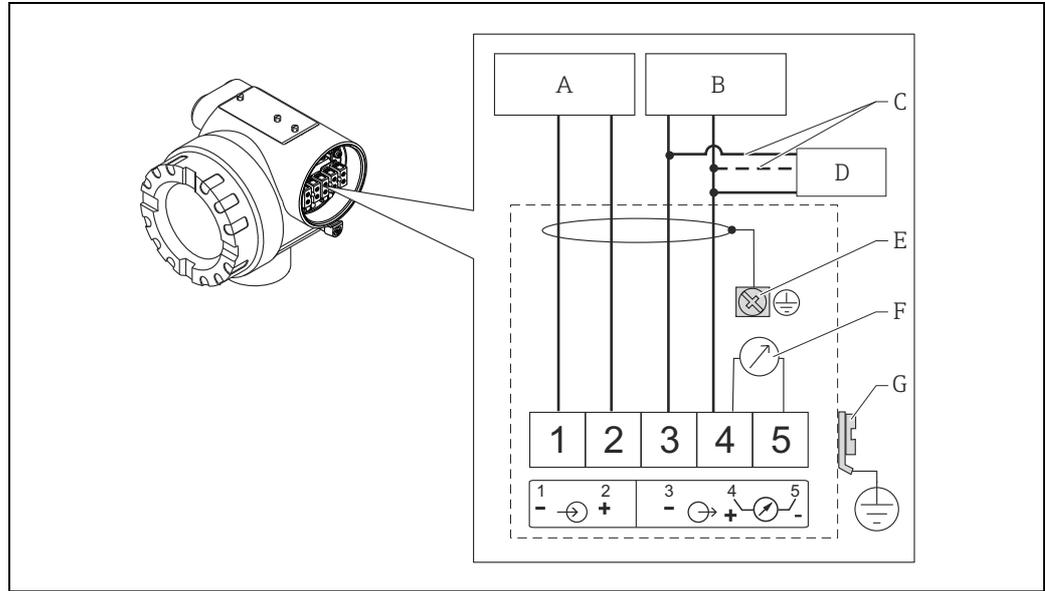

- A Power supply 24 VDC; provided by a supply unit
- B Signal 24 VDC; provided by a supply unit
- C Alternative connection
- D Commbus FXA195, Field Communicator
- E Shielding cable
- F Test socket; Output current
- G PML (potential matching line)

Supply voltage

DC voltage: see the following table

Communication		Terminal voltage	minimum	maximum
Power supply	Standard	U (20 mA) =	16 V	36 V
	Ex	U (20 mA) =	16 V	30 V
Signal	Ex	U (4 mA) =	11.5 V	30 V
		U (20 mA) =	11.5 V	30 V

Power consumption


- max. 330 mW at 16 V
- max. 500 mW at 24 V
- max. 600 mW at 30 V
- max. 700 mW at 36 V

Current consumption

Max. 21 mA (50 mA inrush current)

Electrical connection

The housing features a separate terminal compartment.

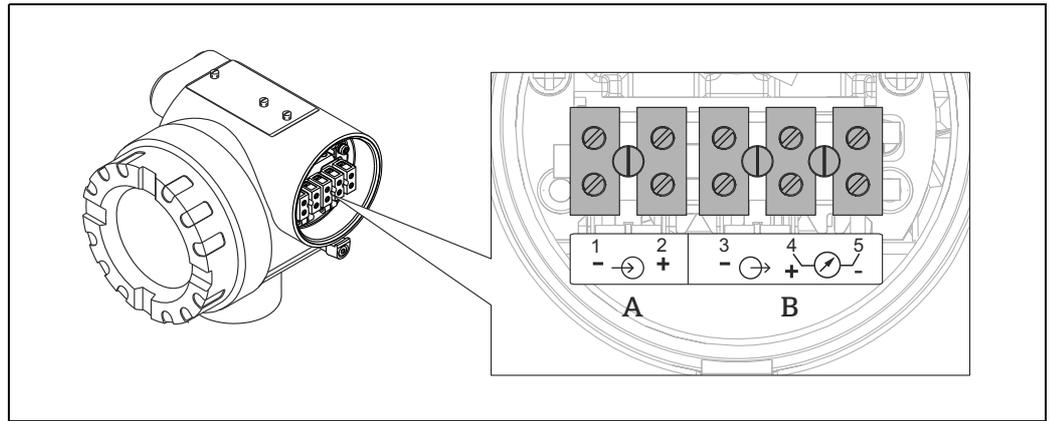

A Power supply
B Voltage

A0020471

Cable entry

Designation	Version
Cable gland M20 Plastics M20x1.5 for cable ϕ 5 to 10 mm (0.2 to 0.39 in)	2
Thread for cable entry G 1/2"	3
Thread for cable entry NPT 1/2"	4

* Order code in Product Configurator (→ 32)

Ripple HART

47 to 125 Hz: $U_{ss} = 200 \text{ mV}$ (at 500Ω)

Max. noise HART

500 Hz to 10 kHz: $U_{eff} = 2.2 \text{ mV}$ (at 500Ω)

Overvoltage protector

- The level transmitter Micropilot S is equipped with an internal overvoltage protector (600 Vrms surge arrester) according to EN/IEC 60079-14 or EN/IEC 60060-1 (impulse current test 8/20 s, $\hat{I} = 10 \text{ kA}$, 10 pulses). Additionally, the device is protected by a galvanic insulation of 500 Vrms between the power supply and the (HART) current output. Connect the metallic housing of the Micropilot S to the tank wall or screen directly with an electrically conductive lead to ensure reliable potential matching.
- Installation with additional overvoltage protection HAW560Z/HAW562Z (see XA00081F, "Safety instructions for electrical apparatus certified for use in explosion-hazardous areas").
 - Connect the external overvoltage protector and the Micropilot S transmitter to the local potential matching system.
 - Potentials shall be equalised both inside and outside the explosion hazardous area.
 - The cable connecting the overvoltage protection and the Micropilot S level transmitter must not exceed 1 m (3.3 ft) in length; the cable must be protected e.g. routed through a metal tube.

Power supply

- For stand alone operation recommended via two Endress+Hauser RN221N.
- Integrated in tank gauging systems via Endress+Hauser Tank Side Monitor NRF590 (recommended).

Highly accurate measurement

For highly accurate measurements the measured variable must be transmitted using HART protocol to ensure the necessary resolution.

Performance characteristics


 For accuracy data for devices suitable for custody transfer measurement in accordance with OIML R85, see Ambient temperature range. →  20.

Reference operating conditions	<p>According to OIML R85:</p> <ul style="list-style-type: none"> ■ Temperature = -25 °C to +55 °C (-13 °F to +131 °F) ■ Atmospheric pressure ■ Relative humidity (air) = 65 % ±15 % ■ Medium properties: e.g. medium with good reflectivity and calm surface ■ Tank diameter: signal beam hits the tank wall only at one side ■ No major interference reflections inside the signal beam
Maximum measured error	<p>Absolute accuracy: better than ±1 mm (0.04 in)</p> <p> Micropilot S versions for free space applications typically provide accuracy of ±0.5 mm (0.02 in), (2 sigma value). Depending on national calibration regulations, the permitted errors after the device has been installed on the tank are ±3 mm (0.12 in), (OIML, API)....</p>
Resolution	<ul style="list-style-type: none"> ■ Digital: 0.1 mm ■ Analog: 0.03 % of measuring range
Settling time	Typical: 15 sec
Hysteresis	0.3 mm (0.01 in)
Non-repeatability	0.3 mm (0.01 in)
Reaction time	The reaction time depends on the parameter settings (min. 1 s). In case of fast level changes, the device needs the reaction time to indicate the new value.
Long-term drift	The long-term drift is within the specified accuracy.
Influence of ambient temperature	Within the specified accuracy according to OIML R85.
Proof of accuracy of custody transfer versions	<p>The accuracy of each Micropilot S is confirmed by a calibration certificate that records the absolute and relative error at 10 measuring points during the final test. A Laser Interferometer (Jenaer Messtechnik ZLM 500) with an absolute accuracy of 0.1 mm is used as a reference for free space measurements with the FMR530/533. For stilling well measurements with the FMR532, NMI / PTB calibrated steel measuring tapes with an absolute accuracy of 0.25 mm are used as a reference.</p> <p>Each Micropilot S also comes with PTB and NMI type approvals to confirm suitability for custody transfer measurement. In addition, certificates confirming initial verification are available on demand for all Micropilot S radar devices.</p>
Maximum fill speed	By the first pass trough of measuring range: 100 mm/min., thereafter unlimited.
Software reliability	<p>The software used in the radar device Micropilot S fulfills the requirements of OIML R85. This particularly includes:</p> <ul style="list-style-type: none"> ■ Cyclical testing of data consistency ■ Non-volatile memory ■ Segmented data storage <p>The radar device Micropilot S continuously monitor the compliance with accuracy requirements for custody transfer measurements according to OIML R85. If the accuracy cannot be maintained, a specific alarm is generated on the local display and via the digital communication (→  29).</p>
Inventory control versions	<p>All device versions can be delivered as "Inventory Control" versions with reduced accuracy (± 3 mm (0.12 in) under reference conditions). No calibration certificate or type approval is supplied with these versions.</p> <p>Order code in the Product Configurator under "Weight + measure approval": Version "R" (→  20)</p>

Installation

Installation conditions

- Recommended distance (1) wall-**outer edge** of nozzle: $\sim 1/6$ of tank diameter ("Beam angle", \rightarrow 19).
- Not in the centre (3), interference can cause signal loss.
- Not above the fill stream (4).
- It is recommended to use a weather protection cover (2) in order to protect the transmitter from direct sun or rain.
Assembly and disassembly is simply done by means of a tension clamp ("Accessories", \rightarrow 33).

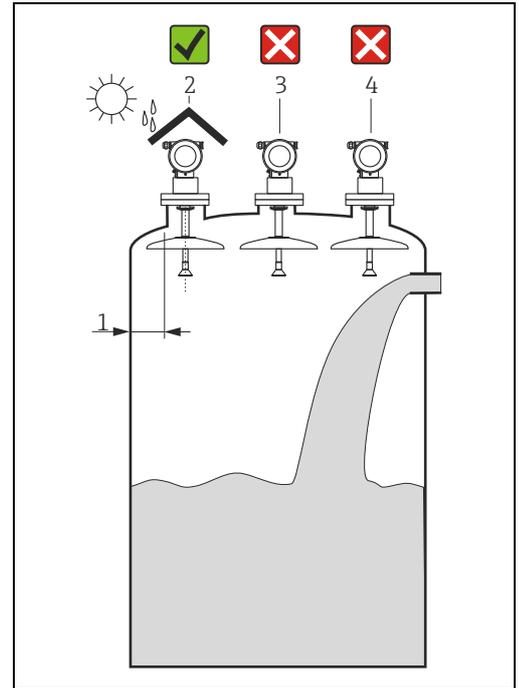


A0020684

Tank installations

- Avoid positioning any installations (1), such as limit switches, temperature sensors etc., inside the signal beam.
- It is essential that HiHi alarm is below the blocking distance (BD) and the safety distance (SD).
- Symmetrical installations (2), e.g. vacuum rings, heating coils, baffles, etc., can also interfere with the measurement.

For more information, please contact your Endress+Hauser sales center.

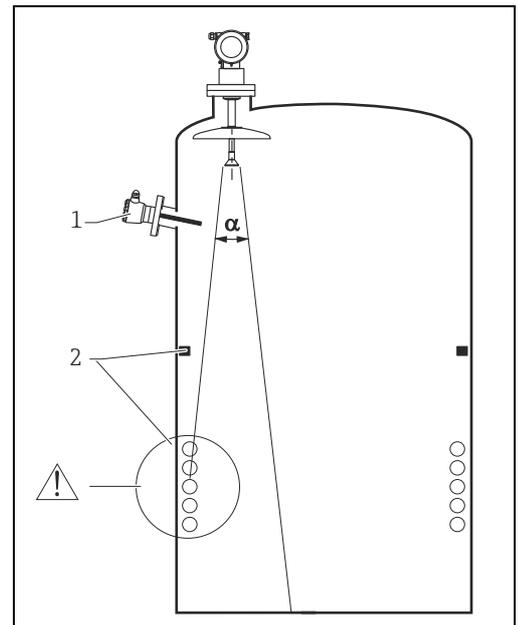

A0020765

Installation instructions


The parabolic antenna is the largest antenna in the Micropilot S series for free space applications and has the smallest beam angle. It is ideal for applications close to tank walls, where a manway cover is available. The parabolic antenna is also an excellent choice on products with a low reflectivity (e.g. asphalts and bitumens).

Optimisation options

- Antenna size: the bigger the antenna, the smaller the beam angle, the less interference echoes.
- Mapping: the measurement can be optimized by means of electronic suppression of interference echoes.
- Antenna alignment: "Installation in tank (free space)", → [17](#)
- Stilling well: a stilling well can always be used to avoid interference. The FMR532 with planar antenna is recommended for stilling wells with diameters from DN150 (see TI01122F/00/EN).

Measuring conditions

- The measuring range begins where, the beam hits the tank bottom. Particularly with dish bottoms or conical outlets the level cannot be detected below this point.
- For **overflow protection**, a safety distance (**SD**) should be added to the blocking distance (**BD**).
- Depending on its consistency, foam can either absorb microwaves or reflect them off its surface. Measurement is possible under certain conditions.
- The smallest possible measuring range **B** (see Fig.) depends on the antenna version.
- Tank diameter and height should be at least dimensioned such that a reflection of the radar signal on both sides of the tank can be ruled out ("Beam angle", → [19](#)).
- In the case of media with a low dielectric constant (groups A and B), the tank bottom can be visible through the medium at low levels (low height **C**). Reduced accuracy has to be expected in this range. If this is not acceptable, we recommend positioning the zero point at a distance **C** (see Fig.) above the tank bottom in these applications.
- When using a **parabolic** antenna, especially for media with low dielectric constants (media group A and B, → [8](#)), the end of the measuring range should not be closer than 1 m (3.3 ft) to the flange (see **BD** in Fig.).
- The safety distance (**SD**) is set at the factory to 0.5 m (1.6 ft) with alarm output.

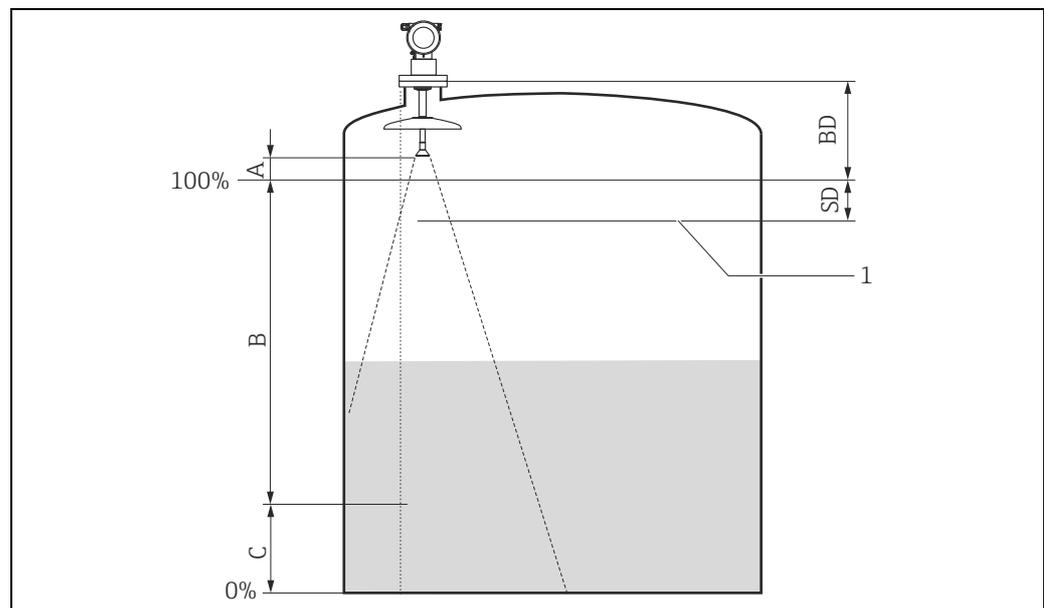


1 Maximum level

Reference: Flange / BD (see Fig.)		Reference: Antenna tip (see Fig.)		
Blocking distance	Safety distance	recommended additional settings		
BD [m (ft)]	SD [m (ft)]	A [mm (in)]	B [m (ft)]	C [mm (in)]
1 (3.3)	0.5 (1.6)	1000 (39.4)	0.5 (1.6)	150 to 300 (5.91 to 11.8)

Behavior if measuring range is exceeded

The behaviour in case of the measuring range being exceeded can be freely set:
The default setting is a current of 22 mA and the generation of a digital warning (E681).

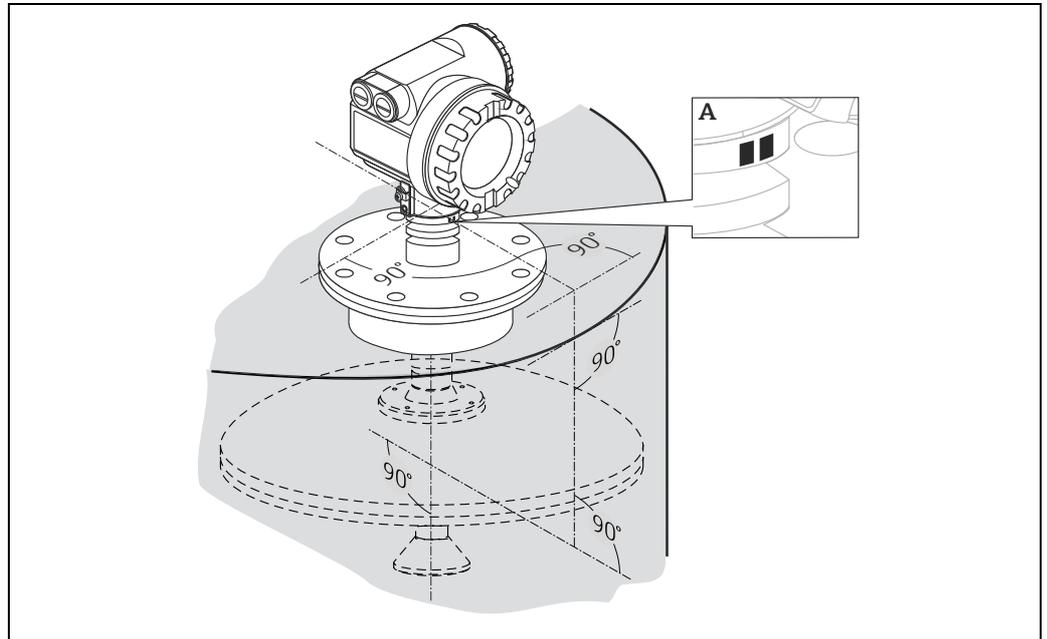Installation in tank (free space)**Optimum mounting position**

A Marking on neck of flange

Standard installation


- Observe installation instructions, → 15.
- Marker is aligned towards tank wall.
The marker is located clearly visible on the sensor neck or the flange.
- After mounting, the housing can be turned 350° in order to simplify access to the display and the terminal compartment.
- Parabolic screen must extend out of the nozzle by at least 10 mm (0.39 in).
- Align parabolic antenna vertically.

Mounting in manway

The parabolic antenna can be mounted on a manway cover. The manway cover must have an opening of diameter D1 or D2 for installing the antenna (see the following diagram).

It has to be possible to remove the cover in order to mount the antenna. The device can be mounted on the manway cover with a weld-on flange with a neck. For a manway, the maximum nozzle height ($H_{max.} = 200 \text{ mm (7.87 in)}$) must be taken into account with the base diameter .

Examples for installation in a manway

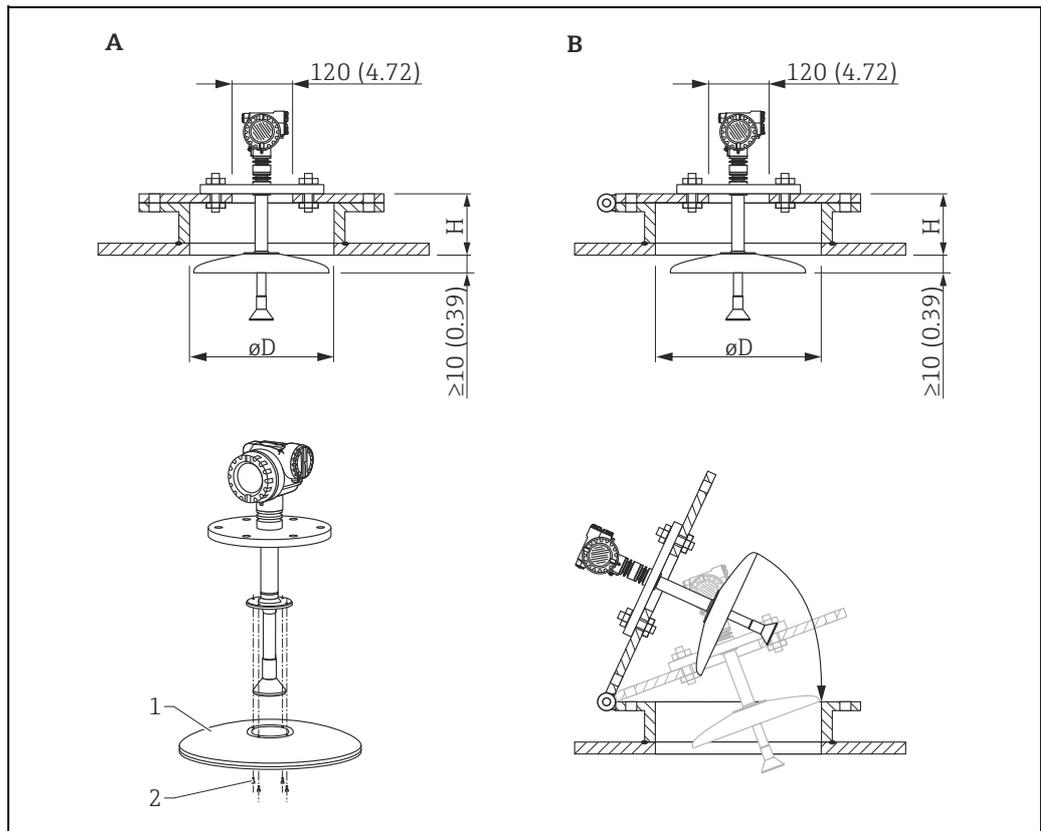

A0021321

- A Standard installation
- B Hinged flange
- 1 Parabolic mirror can be dismantled for installation in the nozzle
- 2 4 screws


	D (=internal diameter of manway) mm (in)	H max. (=maximum height of nozzle) mm (in)
Standard installation D1	≥ 500 (19.7)	200 (7.87)
Hinged flange D2	≥ 600 (23.6)	200 (7.87)

Beam angle

The beam angle is defined as the angle α where the energy density of the radar waves reaches half the value of the maximum energy density (3dB-width).
 Microwaves are also emitted outside the signal beam and can be reflected off interfering installations.
 Beam diameter **W** as a function of antenna type (beam angle α) and distance **D**:

	Parabolic antenna
Beam angle α	7°

Reference height of tank (GRH) (m [ft])	recommended distance from tank wall (W/2) (m [ft])
3 (9.8)	0.2 (0.7)
6 (20)	0.4 (1.3)
9 (30)	0.6 (2.0)
12 (39)	0.7 (2.3)
15 (49)	0.9 (3.0)
20 (66)	1.2 (3.9)
25 (82)	1.5 (4.9)
38 (125)	2.3 (7.5)
40 (131)	2.4 (7.9)

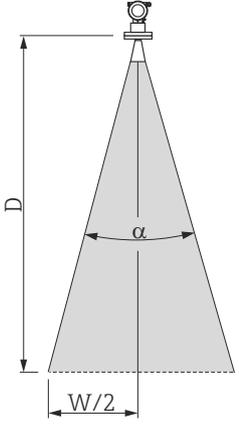

A0020455

NOTICE

Measuring error due to multiple echoes!

- ▶ Ensure that **only one** tank wall (**not two** tank walls) is hit directly by the radar beam!

Environment

Ambient temperature range	<p>Ambient temperature for the transmitter:</p> <ul style="list-style-type: none"> Standard: -40 °C to +80 °C (-40 °F to +176 °F) For custody transfer measurement: -25 °C to +55 °C (-13 °F to +131 °F) <p>For $T_u < -20$ °C (-4 °F) and $T_u > +60$ °C (+140 °F), the functionality of the LCD is restricted. A weather protection cover should be used for outdoor operation if the device is exposed to direct sunlight.</p>
Storage temperature	-40 °C to +80 °C (-40 °F to +176 °F)
Climate class	DIN EN 60068-2-38 (test Z/AD)
Degree of protection	<ul style="list-style-type: none"> Housing: IP65/68, NEMA 4X/6P Antenna: IP65/68, NEMA 4X/6P
Vibration resistance	DIN EN 60068-2-64 / IEC 68-2-64: 20 to 2000 Hz, 1 (m/s ²) ² /Hz
Cleaning of the antenna	The antenna can get contaminated, depending on the application. The emission and reception of microwaves can thus eventually be hindered. The degree of contamination leading to an error depends on the medium and the reflectivity, mainly determined by the dielectric constant ϵ_r . If the medium tends to cause contamination and deposits, cleaning on a regular basis is recommended. Care must be taken during spray-washing or mechanical cleaning to avoid damage to the antenna. The material compatibility has to be considered if cleaning agents are used! The maximum permitted temperature at the flange should not be exceeded
Electromagnetic compatibility (EMC)	<ul style="list-style-type: none"> Electromagnetic compatibility in accordance with all relevant requirements of the EN 61326 series and NAMUR recommendation (NE21). For details refer to the Declaration of Conformity. Maximum deviation < 0.5 % of the span. A standard installation cable is sufficient if only the analogue signal is used. Use a screened cable when working with a superimposed communications signal (HART).

Approvals for custody transfer All aspects of OIML R85 are fulfilled.

Approvals for custody transfer	Version*
NMi + PTB (<1 mm [0.04 in]) type approval (→ 31)	A
NMi-witnessed initial calibration (<1 mm [0.04 in]) (→ 31)	F
PTB-witnessed initial calibration (<1 mm [0.04 in]) (→ 31)	G
not selected; Inventory control (→ 14)	R


* Order code in Product Configurator (→ 32)

Process

Process temperature range	-40 °C to +200 °C (-40 °F to 392 °F)
Process pressure limits	0 to 16 bar (0 to 240 psi)
Dielectric constant	$\epsilon_r \geq 1.9$

Mechanical construction

Design, dimensions

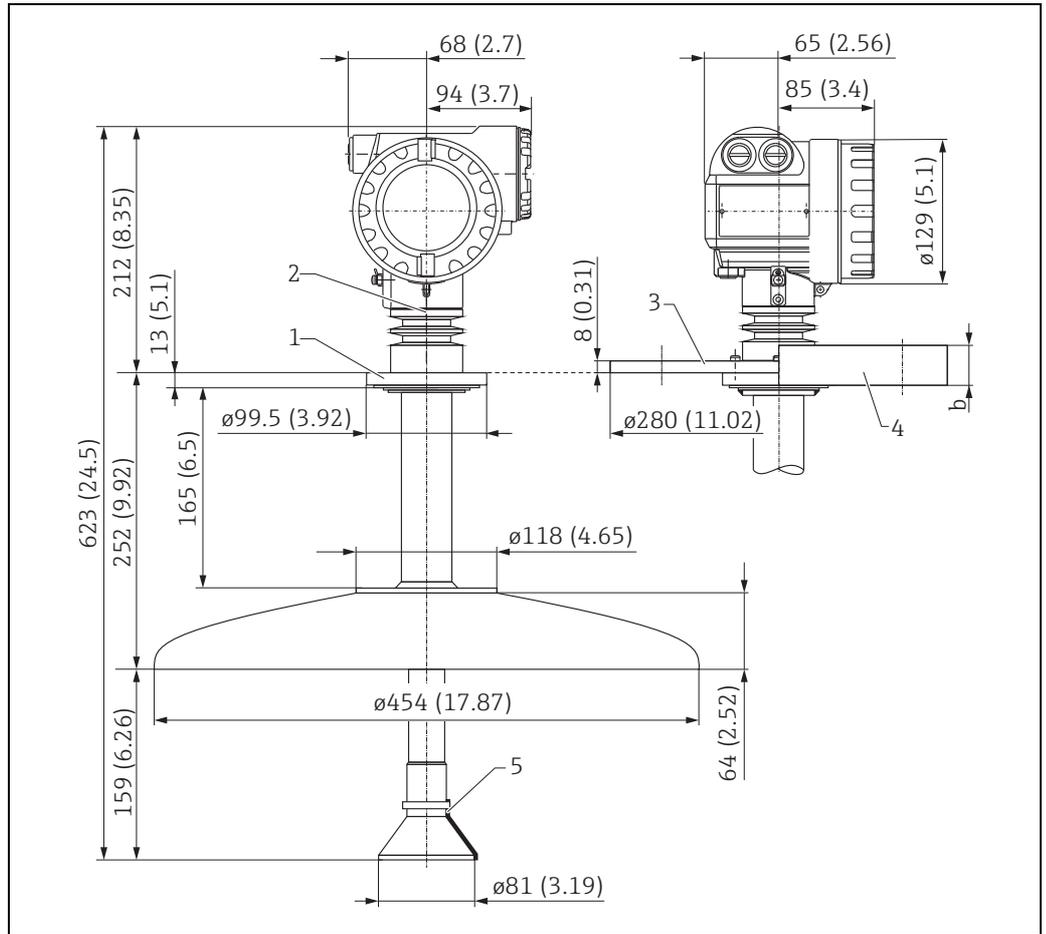

A0020827

Engineering unit mm (in)

- 1 Flange hub
- 2 Marking
- 3 Endress+Hauser UNI flange (max. 1 bar (15 psi))
- 4 DIN, ANSI, JIS, JPI (see table)
- 5 Deflector rod $\varnothing 3$ mm (0.12 in)

Flange / Process connection	b (mm [in])	$\varnothing D$ (mm [in])	Version*
ANSI B16.5			
6" 150 lbs	25.4 (1.0)	279.4 (11.0)	AVJ
8" 150 lbs	28.4 (1.12)	342.9 (13.5)	A3J
10" 150 lbs	30.2 (1.19)	406.4 (16.0)	A5J
Flange JIS B2220			
10K 150A	22 (0.87)	280 (11.0)	KVJ
10K 200A	22 (0.87)	330 (13.0)	KDJ
10K 250A	24 (0.94)	400 (15.7)	K5J
Flange JPI 7S -15			
6" 150A 150 lbs	25,9 (1,2)	280 (11.0)	LJJ
8" 200A 150 lbs	29,0 (1,14)	345 (13.6)	LKJ
10" 250A 150 lbs	30,6 (1,2)	405 (15.9)	LLJ


Flange / Process connection	b (mm [in])	øD (mm [in])	Version*
Flange EN1092-1 (suitable for DIN2527 C)			
DN150 PN16	22 (0.87)	285 (11.2)	CWJ
DN200 PN16	24 (0.94)	340 (13.4)	CXJ
DN250 PN16	26 (1.02)	405 (15.9)	C6J

* Order code in Product Configurator (→ [32](#))

 Detailed information on Endress+Hauser UNI flange (→ [25](#)).

Weight 13 kg (28.67 lbs) + flange weight¹⁾

Materials **Materials in contact with process**

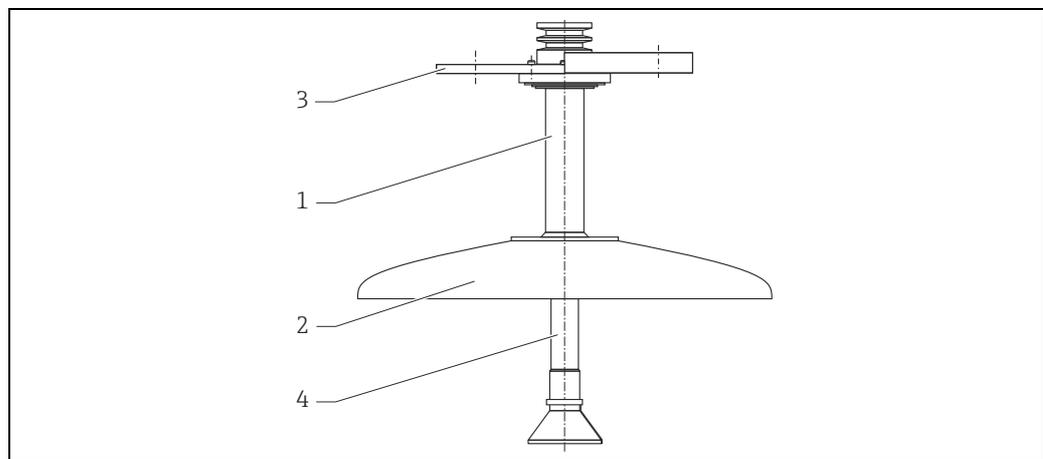


A0021083

Pos.	Part	Material
1	Adapter	316L (1.4435)
	Pipe	316L (1.4435)
	Reflector adapter	316L (1.4435)
2	Parabolic reflector	316L (1.4404)
	Screw	A4
	Spring washer	A2
3	Flange	316L (1.4404/1.4435)
	Adapter	316L (1.4404)
	Sealing	Viton
	Screws, Spring washer	A2
4	Tube	PTFE conductive
	Antenna taper + foil	PTFE + PTFE conductive
	Subreflector	316L (1.4435)
	Clamp	1.4430
	Ring	316L (1.4404)

1) Flange weights according to form sheet

Materials not in contact with process

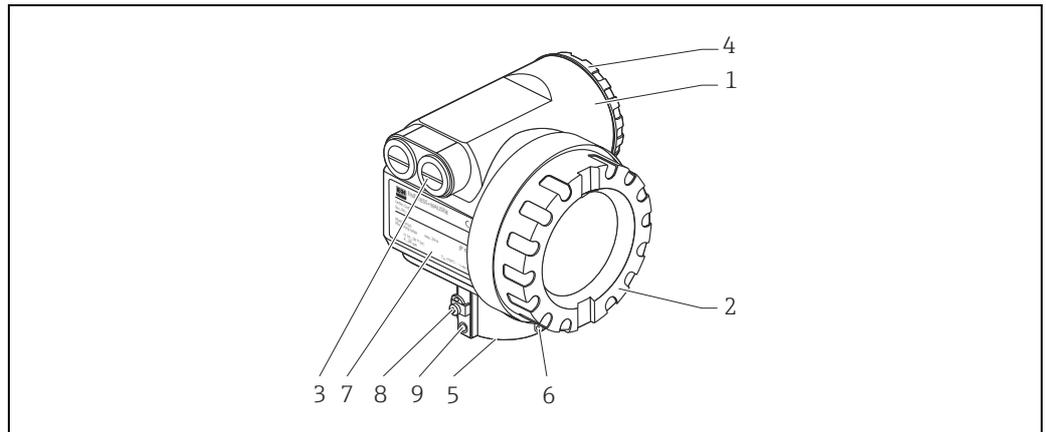

A0020714

Housing T12, aluminum

Pos.	Part	Material	
1	T12 housing	AlSi10Mg (aluminum, powder-coated)	
2	Cover (Display)	AlSi10Mg	
	Seal	Fa. SHS: EPDM 70pW FKN	
	Window	ESG-K-Glass (Toughened safety glass)	
	Sealing of the glass	Silicone sealing compound Gomastit 402	
3	Seal	Fa. SHS: EPDM 70 pW FKN	Trelleborg: EPDM E7502
	Cable gland	Polyamid (PA), CuZn nickel-plated	
	Plug	PBT-GF30	1.0718 galvanized
		PE	3.1655
Adapter	316L (1.4435)	AlMgSiPb (anodized)	
4	Cover (Connection compartment)	AlSi10Mg	
	Sealing	Fa. SHS: EPDM 70pW FKN	Trelleborg: EPDM E7502/ E7515
	Clamp	Screws: A4; Clamp: Ms nickel-plated; Spring washer: A4	
5	Sealing ring	Fa. SHS: EPDM 70pW FKN	Trelleborg: EPDM E7502/ E7515
6	Tag	304 (1.4301)	
	Rope	VA	
	Crimp sleeve	Aluminium	
7	Nameplate	316L (1.4404)	
	Groove pin	A4 (1.4571)	
8	Ground terminal	Screws: A2; Spring washer: A4; Clamp: 304 (1.4301) Holder: 1.4310	
9	Screw	A2-70	

 Endress+Hauser supplies DIN/EN flanges made of stainless steel according to AISI 316L (DIN/EN material number 1.4404 or 1.4435). With regard to their temperature stability properties, the materials 1.4404 and 1.4435 are grouped under 13E0 in EN 1092-1 Tab. 18. The chemical composition of the two materials can be identical.

Type plate for custody transfer applications

In addition to the standard nameplate, the device has a type plate for custody transfer detailing the following information:

- manufacturer
- device type
- label for custody transfer approval
 - PTB: "Z" with approval number and issuing agency, the 4-digit approval number is shown in the upper part of the "Z", the lower part shows year and month of type approval.
 - NMi: field for 5-digit approval number
- year of manufacturing
- space for imprinted tank identification number
- statement of measuring range suitable for custody transfer approval including unit
- statement of ambient temperature range suitable for calibration to regulatory standards.


The following statements are also required for calibration to regulatory standards. They are listed on the standard type plate and are not repeated here:

- date of manufacturing
- tester

The type plate for calibration to regulatory standards can be sealed. It is mounted with screws, therefore also available as a spare part. The "stamping" of the electronic compartment is achieved with the custody locking switch (compare figure, → 24) and does not require any additional stamping location.


 The fields are only filled if in feature "70 - Weight + measure approval" the variant "F" or "G" is selected.

NMi type plate (example)

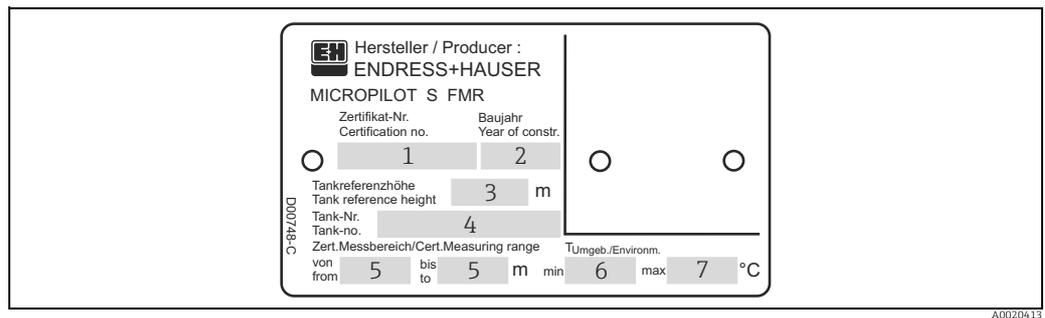

- 1 Certificate number
- 2 Year of manufacture
- 3 Tank reference height
- 4 Tank number
- 5 Certified measuring range from ... to
- 6 Min. ambient temperature
- 7 Max. ambient temperature

PTB type plate (example)

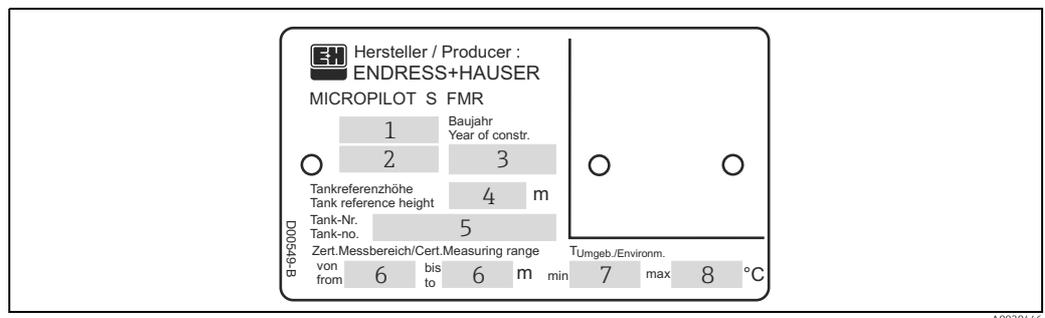


- 1 Approval number
- 2 Year and month of type approval
- 3 Year of manufacture
- 4 Tank reference height
- 5 Tank number
- 6 Certified measuring range from ... to
- 7 Min. ambient temperature
- 8 Max. ambient temperature

Endress+Hauser UNI flange

Installation hints


Endress+Hauser UNI flanges are designed for non-pressurized operation. Typical pressure fluctuations of breather valves can be tolerated. The number of bolts has sometimes been reduced. The bolt-holes have been enlarged to allow for the dimensions to be adapted. Therefore, the flange must be properly aligned with the counterflange before the bolts are tightened.

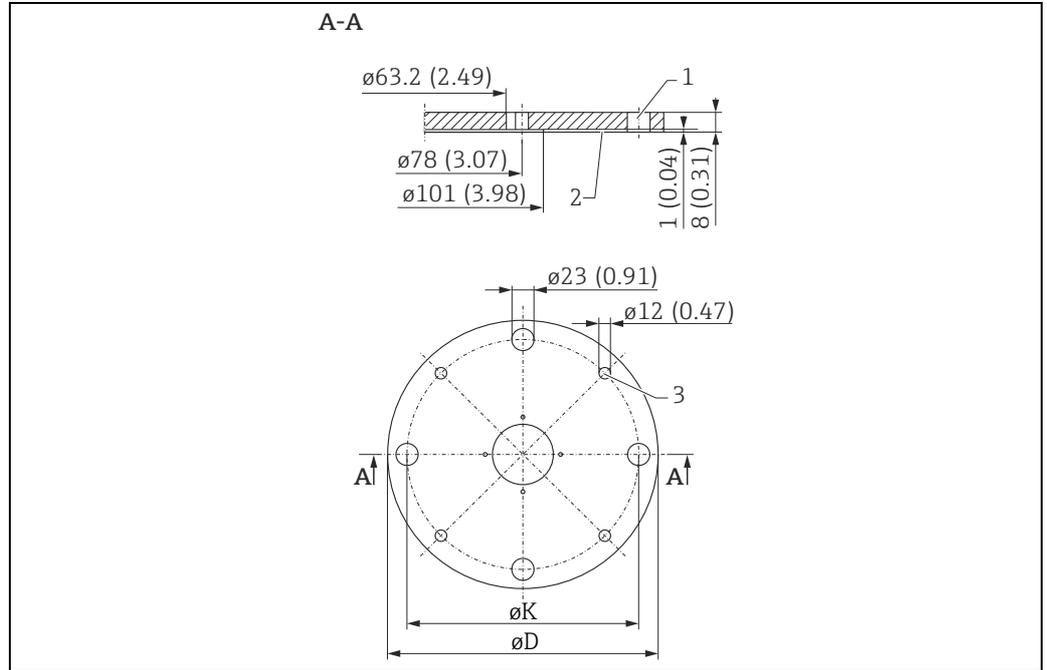

- 1 Sealing surface
- 2 4 x $\varnothing 7$ mm (0.28 in) moved 90°
- 3 For small screws

Compatible with	$\varnothing D$ (mm [in])	$\varnothing K$ (mm [in])	Type plate no.	Material	Version*
<ul style="list-style-type: none"> ■ DN150 PN16 ■ ANSI 6" 150lbs ■ JIS 10K 150 	280 (11.0)	240 (9.45)	942455-3001	1.4301	XVU

* Order code in Product Configurator (→ 32); for flange hub version XXJ

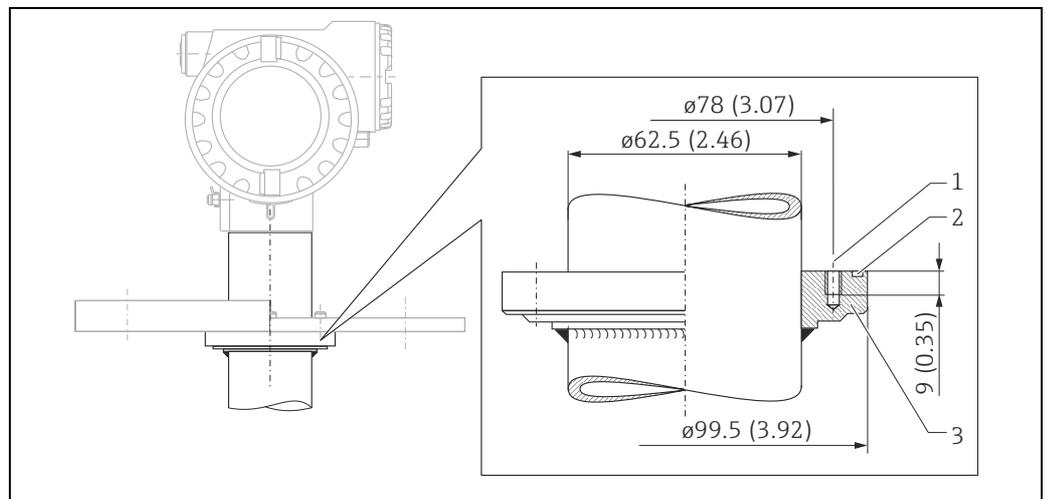

Flange hub for mounting flanges supplied by customer. Engineering unit mm (in)

- 1 Mounting: 4 screws M6 / 90°, e.g. DIN 912
- 2 O-ring 82.3 x 3.53 mm (3.24 to 0.14 in) is supplied (same material as sensor seal)
- 3 Flange hub, see Endress+Hauser UNI flange

Operability

Operation concept

The display of the process value and the configuration of the Micropilot is done locally by means of a large 4-line alphanumeric display with plain text information. The guided menu system with integrated help texts ensures a quick and safe commissioning. Display and operation are possible in any one of seven languages (English, German, French, Italian, Dutch, Spanish or Japanese). During the first start-up, the device explicitly asks for the desired unit / language. To access the display the cover of the electronic compartment may be removed even in hazardous area (Ex ia, IS). Remote commissioning, including documentation of the measuring point and also in-depth analysis functions, is supported via FieldCare, the FDT-based Plant Asset Management Tool from Endress+Hauser.


Access to the electronics can be prevented by means of a custody locking switch that locks the device settings.

The custody locking switch can be sealed for custody transfer applications.

Local operation

Operation with VU331

Using the LC-Display, configuration is possible directly at the device via the operating keys. All device functions can be set through a menu system. The menu consists of function groups and functions. Within a function, application parameters can be read or adjusted. The user is guided through a complete configuration procedure.

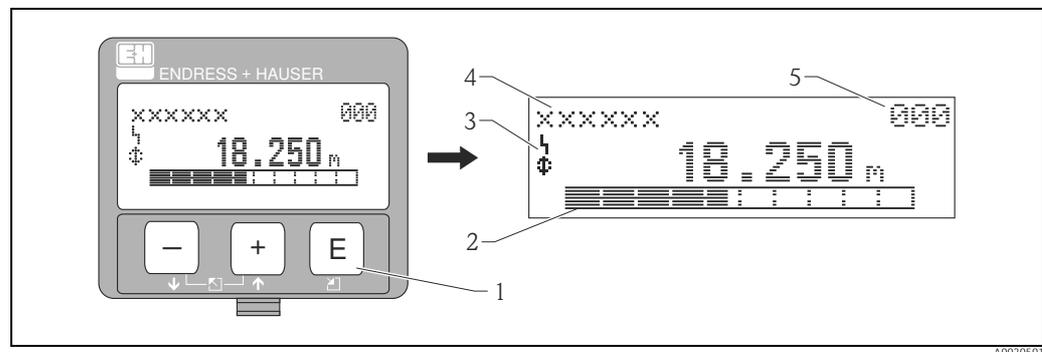

- 1 Operating keys
- 2 Bar graph
- 3 Symbols
- 4 Function name
- 5 Parameter identification number

Remote operation

The Micropilot S can be remotely operated via HART. On-site adjustments are also possible.

Operation with FieldCare

FieldCare is an Endress+Hauser asset management tool based on FDT technology. With FieldCare, you can configure all Endress+Hauser devices as well as devices from other manufacturers that support the FDT standard. Hardware and software requirements can be found on the internet at: www.de.endress.com → Search: FieldCare → FieldCare → Technical data.


FieldCare supports the following functions:

- Configuration of transmitters in online operation
- Signal analysis via envelope curve
- Tank linearization
- Loading and saving device data (upload/download)
- Documentation of measuring point

Connection options:


- HART via Commubox FXA195 and the USB port on a computer
- Commubox FXA291 with ToF Adapter FXA291 (USB) via service interface

Menu-guided commissioning

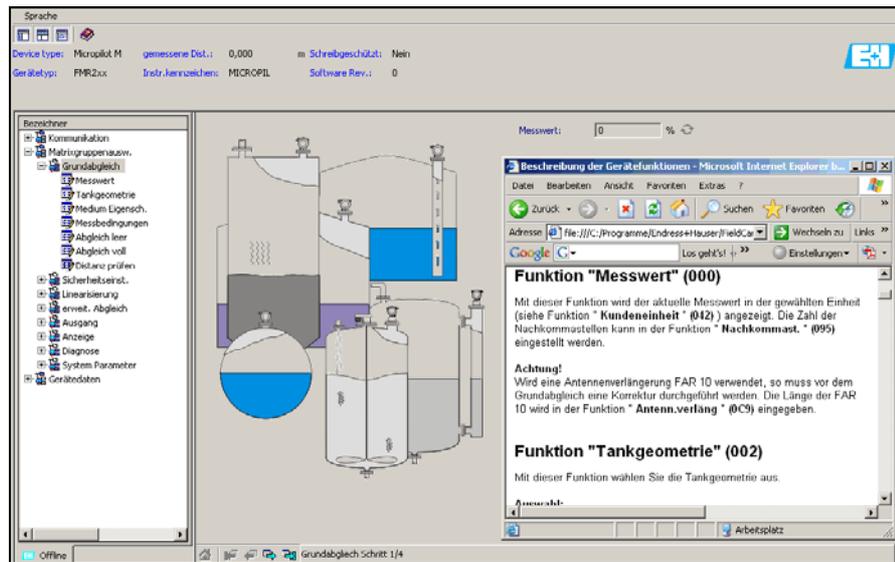

A0021211-EN

Signal analysis via envelope curve

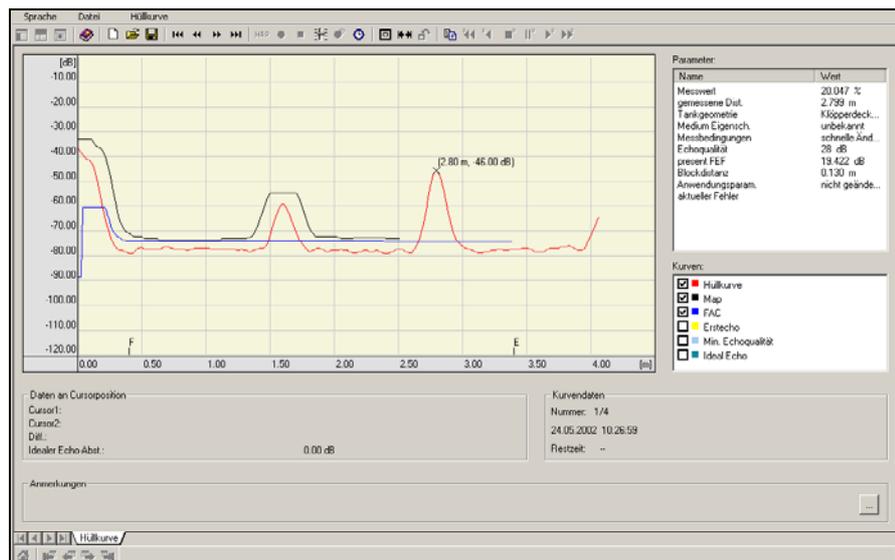

A0021212-EN

Tank linearization

The screenshot displays the 'Tank linearization' software interface. On the left, a table lists input data for tank linearization:

Index	Eingabe Füllst. (m)	Eingabe Volumen (%)
1	0.000	0.000
2	0.065	1.772
3	0.129	3.765
4	0.194	5.990
5	0.259	8.417
6	0.323	11.080
7	0.387	13.966
8	0.452	17.078
9	0.516	20.411
10	0.581	23.965
11	0.645	27.736
12	0.710	31.710
13	0.774	36.884
14	0.839	39.999
15	0.903	44.256
16	0.968	48.546
17	1.032	52.943
18	1.097	57.120
19	1.161	61.349
20	1.226	65.500
21	1.290	69.536
22	1.355	73.409
23	1.419	77.068
24	1.484	80.508
25	1.548	83.727
26	1.613	86.722
27	1.677	89.432
28	1.742	92.030
29	1.806	94.360
30	1.871	96.459
31	1.935	98.339
32	2.000	100.000

The right side of the interface features a 3D diagram of a tank with dimensions labeled: H (height), E (empty height), F (full height), D (diameter), L (length), and P (support position). Below the diagram are input fields for these parameters:

- H: 2.2 [m]
- Leer (E): 2.2 [m]
- Voll (F): 2 [m]
- Durchmesser (D): 2 [m]
- Länge (L): 5 [m]
- Winkel: 15
- Boden Typ (rechts): flach
- Boden Typ (links): flach
- Stützenposition (P): 2.5 [m]

At the bottom, there are controls for 'Typ' (zylindrisch liegende Tanks), 'Stützpunkt' (32), 'Füllhöhe' (automatisch/benutzerdefiniert), and 'Start Volumen' (null/berechnet).

A0021213-EN

Operation with Field Communicator 475

With the Field Communicator 475, all device functions can be configured via a menu operation.




Further information on the handheld terminal can be found in the relevant Operating Instructions included in the transport bag of the Field Communicator 475.

Display elements

Liquid crystal display (LCD):

Four lines with 20 characters each. Display contrast adjustable through key combination.

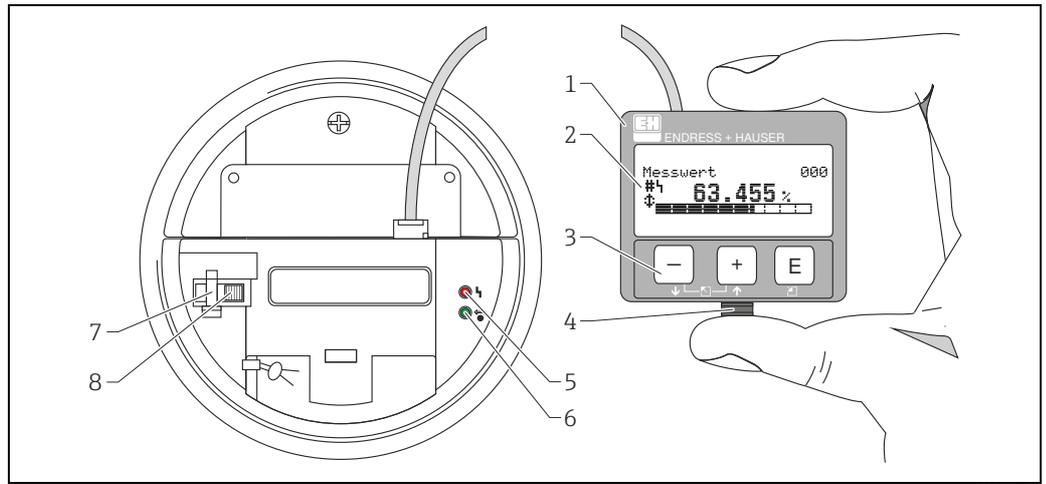

- 1 Liquid crystal display
- 2 Symbols
- 3 Operating keys
- 4 Snap fit
- 5 Red LED
- 6 Green LED
- 7 Custody locking switch
- 8 Sealing pin

i To access the display, it is possible to open the cover of the electronics compartment even in an explosion hazardous area. The LCD can be removed for easy operation by simply pressing the snap fit (see graphic above). It is connected to the device by means of a 500 mm (19.7 in) long cable.

Display symbols

The following table describes the symbols that appear on the liquid crystal display:

Symbols	Meaning
	ALARM_SYMBOL This alarm symbol appears when the device is in an alarm state. If the symbol flashes, this indicates a warning.
	LOCK_SYMBOL This lock symbol appears when the device is locked, i.e. if no input is possible.
	COM_SYMBOL This communication symbol appears when a data transmission via e.g. HART is in progress.
	Calibration to regulatory standards disturbed If the device is not locked or suitability for custody transfer measurement cannot be guaranteed, this will be indicated on the display by this symbol.

Light emitting diodes (LEDs):

There is a green and a red LED beside the LCD.

LED	Meaning
red LED continuously on	Alarm
red LED flashes	Warning
red LED off	No alarm
green LED continuously on	Operation
Green LED flashes	Communication with external device

Operating elements

The operating elements are located inside the housing and are accessible for operation by opening the lid of the housing.

Function of the keys

Key(s)	Meaning
 or 	<ul style="list-style-type: none"> ■ Navigate upwards in the selection list. ■ Edit numeric value within a function.
 or 	<ul style="list-style-type: none"> ■ Navigate downwards in the selection list. ■ Edit numeric value within a function.
 or 	Navigate to the left within a function group.
	<ul style="list-style-type: none"> ■ Navigate to the right within a function group. ■ Confirm entries.
 and  or  and 	Contrast settings of the LCD.
 and  and 	Hardware lock / unlock After a hardware lock, an operation of the device via display or communication is not possible! The hardware can only be unlocked via the display. An unlock parameter must be entered to do so.

Certificates and approvals

CE approval	The measuring system meets the legal requirements of the EC-guidelines. Endress+Hauser confirms the device passing the required tests by attaching the CE-mark.
C-Tick symbol	The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".
Ex approval	<ul style="list-style-type: none"> ▪ ATEX ▪ CSA ▪ FM ▪ NEPSI ▪ TIIS <p>When operating in hazardous areas, additional safety instructions must be observed. These can be found in the separate document entitled "Safety Instructions" (XA), which is included in the scope of delivery. The applicable XA is indicated on the nameplate.</p> <p> Details on the certificates available and the relevant XAs can be found in the "Documentation" section under "Safety instructions" →  34.</p>
Overfill prevention	WHG, see ZE00243F/00/DE.
RF approvals	R&TTE 1999/5/EG, FCC CRF 47, part 15
Custody type approval	All aspects of OIML R85 are fulfilled.
External standards and guidelines	<p>To conception and development for Micropilot S have been followed the external standards and guidelines:</p> <p>EN 60529 Protection class of housing (IP-code)</p> <p>EN 61010 Safety regulations for electrical devices for measurement, control, regulation, and laboratory use</p> <p>EN 61326 Emissions (equipment class B), compatibility (appendix A – industrial area)</p> <p>NAMUR Standards committee for measurement and control in the chemical industry</p> <p>API (American Petroleum Institute) Particularly "Manual of Petroleum Measurement Standards"</p> <p>OIML R85 (Organisation Internationale de Métrologie Légale)</p>

Ordering information

Ordering information

Detailed ordering information is available as follows:

- In the Product Configurator on the Endress+Hauser website: www.endress.com → Select country → Instruments → Select device → Product page function: Configure this product
- From your Endress+Hauser sales center: www.endress.com/worldwide



Product Configurator - the tool for individual product configuration

- Configuration data updated on a daily basis
- Depending on the device: Direct input of data specific to measuring point, such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic generation of order code with breakdown in PDF or Excel output format
- Possibility to order directly from the Endress+Hauser online shop

Scope of delivery

The scope of delivery comprises:

- Device, mounted
- Optional accessories
- 2 lead seals
- CD-ROM with Endress+Hauser operating software
- Brief Operating Instructions KA01058F/00/EN for fast commissioning (included with device)
- Brief Operating Instructions KA00161F/00/A2 (basic calibration/trouble-shooting), stored in device
- Approval documentation, if not included in the Operating Instructions
- CD-ROM with additional technical documentation, e.g.
 - Operating Instructions
 - Description of Instrument Functions


Accessories

A variety of accessories is available for the Micropilot S. They can be ordered separately from Endress+Hauser.

Device-specific accessories

Weather protection cover

A weather protection cover made of stainless steel is available for outdoor installation (order code: 543199-0001). The shipment includes the protective cover and tension clamp.

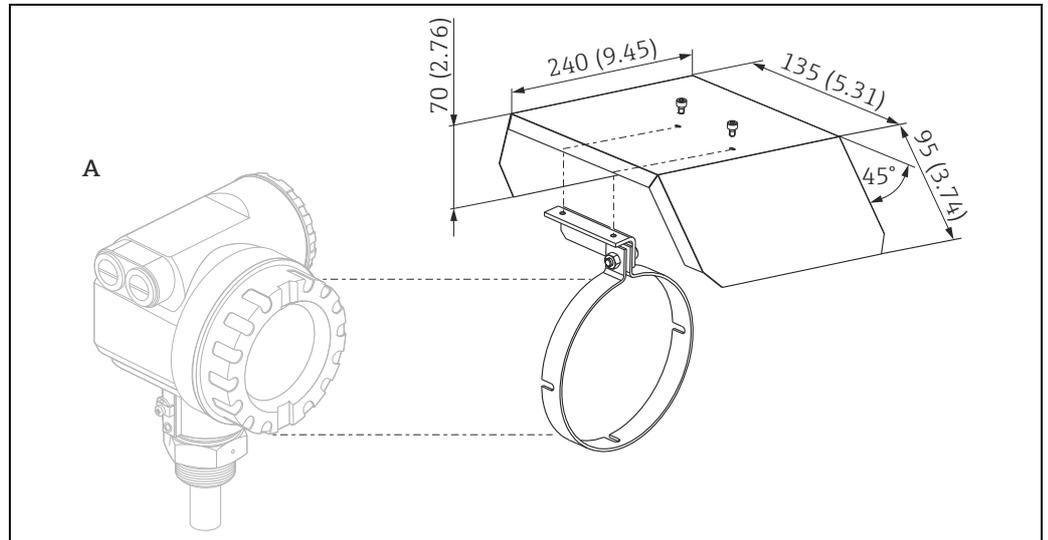

Engineering unit mm (in)

A Housing T12

A0020691

Communication-specific accessories

Commubox FXA195 HART

For intrinsically safe communication with FieldCare via the USB interface.
For details refer to TI00404F/00/EN.

Commubox FXA291

The Commubox FXA291 connects Endress+Hauser field devices with CDI interface (= Endress+Hauser Common Data Interface) to the USB interface of a personal computer or a notebook.
For details refer to TI00405C/07/EN.



For the device you need the "ToF Adapter FXA291" as an additional accessory.

ToF Adapter FXA291

The ToF Adapter FXA291 connects the Commubox FXA291 via the USB interface of a personal computer or a notebook to the device. For details refer to KA00271F/00/A2.

Field Xpert

Compact, flexible and robust industrial handheld terminal for remote configuration and measured value retrieval via HART current output and via FOUNDATION Fieldbus.
For details, see Operating Instructions BA00060S.

Service-specific accessories

FieldCare

FDT-based Plant Asset Management Tool from Endress+Hauser. It can configure all smart field units in your system and help you manage them. By using the status information, it is also a simple but effective way of checking their status and condition. For details, see Operating Instructions BA00027S and BA00059S.

Supplementary Documentation

Standard documentation

The following document types are available:

- On the CD supplied with the device
- In the Download Area of the Endress+Hauser website → www.de.endress.com → Download

Documentation	
Operating Instructions	BA00209F/00/EN
Description of instrument functions	BA00217F/00/EN
Brief Operating Instructions (for fast commissioning)	KA01058/00/EN2
Brief Operating Instructions (in the device)	KA00161F/00/A2

Supplementary device-dependent documentation

Device	Documentation	
Tank Side Monitor NRF590	Technical Information	TI00402F/00/EN
	Operating Instructions	BA00256F/00/EN
	Description of Instrument Functions	BA00257F/00/EN

Safety Instructions

Depending on the approval, Safety Instructions (XA) are supplied with the device. These instructions are an integral part of the Operating Instructions.

Certificate/type of protection	Documentation	Version*
ATEX II 1/2 G Ex ia IIC T6	XA00081F	1
ATEX II 1/2 G Ex ia IIC T6 + WHG	XA00081F + WHG: ZE00243F/00/EN	6
ATEX II 3G Ex nA IIC T6	XA00231F	G
FM IS Cl.I Div.1 Gr.A-D	XA00555F	S
CSA IS Cl.I Div.1 Gr.A-D	XA00540F	U
NEPSI Ex ia IIC T6 to T1	XA00579F	I
TIIS Ex ia IIC T3	–	K
TIIS Ex ia IIC T6	–	L

* Order code in Product Configurator (→  32)



The nameplate indicates which Safety Instructions (XA) apply to the device.



www.addresses.endress.com
